





Models NO4, NO4S, NO6, NO6S

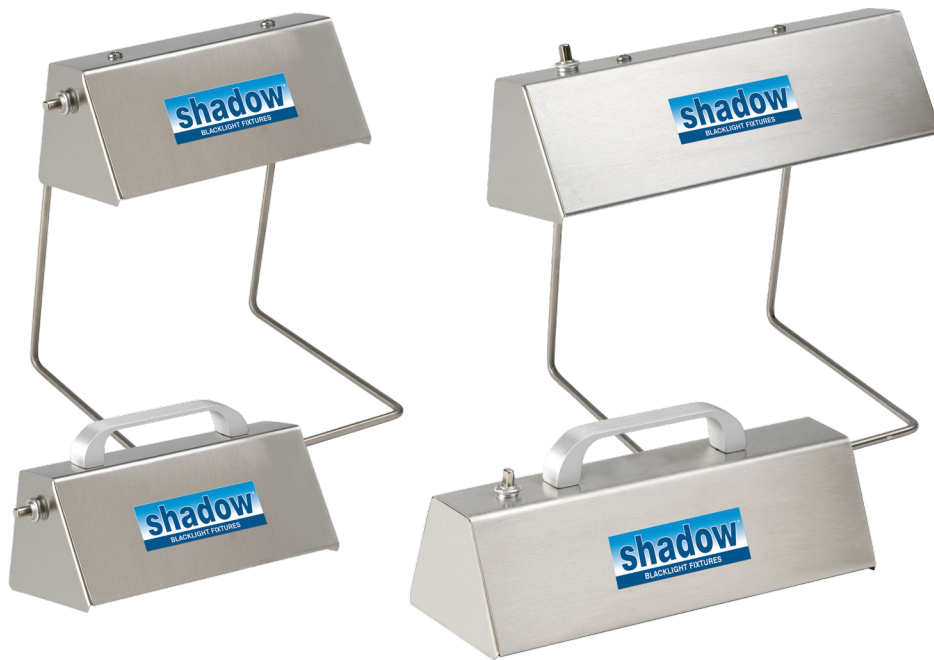

Installation, Operation & Maintenance

Read and Follow All Safety Instructions. Save These Instructions.

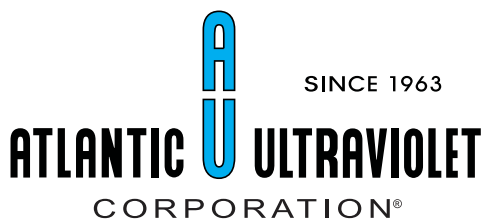

Manufacturers / Engineers / Sales / Service
Germicidal Ultraviolet - Equipment & Lamps

375 Marcus Boulevard • Hauppauge, NY 11788
631.273.0500 • Fax: 631.273.0771
Email: Sales@AtlanticUV.com
Ultraviolet.com • BuyUltraviolet.com

Extensive Product Information Available at:

Ultraviolet.com
BuyUltraviolet.com



Owner's Manual

TABLE OF CONTENTS

SAFETY WARNINGS	3
SAFETY INSTRUCTIONS	3
SAFETY LABELING.....	3
CAUTION.....	3
PRODUCT APPLICATION	4
CONSTRUCTION.....	4
PRINCIPLE OF OPERATION	4
UNPACKING	4
INSTALLATION	5
PRECAUTIONS.....	5
OPTIONAL ACCESSORIES	5
MAINTENANCE.....	6
BREAKAGE	6
DISPOSAL OF MERCURY ADDED LAMPS.....	6
TROUBLESHOOTING	6
TECHNICAL SPECIFICATIONS.....	7
REPLACEMENT PARTS.....	7
USER ASSISTANCE	8
PATENT NOTICE.....	8
WARRANTY & PRODUCT REGISTRATION.....	8

These instructions generally describe the installation, operation and maintenance of the **Shadow®** Blacklight Fixtures. Questions that are not specifically answerable by these instructions should be directed to the factory. Atlantic Ultraviolet Corporation® takes all possible precautions when packaging equipment to prevent damage. Carefully inspect and report all damages. Do not install damaged equipment. Follow all instructions on any labels or tags. Carefully inspect all packing materials before discarding to prevent the loss of accessories, mounting hardware, spare parts or instructions.

The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.



SAFETY WARNINGS

- All personnel should be alerted to the potential hazards indicated by the product safety labeling on this unit.
- The following conventions are used to indicate and classify precautions in this manual and on product safety labeling. Failure to observe precautions could result in injury to people or damage to property.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

Danger indicates an **IMMINENTLY** hazardous situation, which, if not avoided, **WILL** result in death or serious injury.

WARNING

Warning indicates a **POTENTIALLY** hazardous situation, which, if not avoided, **COULD** result in death or serious injury.

CAUTION

Caution indicates a **POTENTIALLY** hazardous situation, which, if not avoided, **MAY** result in minor or moderate injury.

CAUTION

Caution used without the safety alert symbol indicates a potentially hazardous situation, which, if not avoided, may result in property damage.



This symbol is used to identify an **ELECTRICAL SHOCK** or **ELECTROCUTION** hazard.



This symbol is used to identify an **ULTRAVIOLET LIGHT** hazard.



This symbol is used to identify the need to wear approved ultraviolet blocking eyewear.



This symbol is used to identify the need to wear approved ultraviolet blocking face shield.



This symbol is used to identify the need to wear protective gloves.



This symbol is used to identify components which must not be disposed of in trash

SAFETY INSTRUCTIONS

WARNING



To guard against injury, basic safety precautions should be observed, including the following:

1. Read and follow **ALL** safety instructions.



WARNING

Avoid exposure to direct or reflected ultraviolet rays.

2. Intended for indoor use only.
3. Do not alter design or construction.
4. Do not use this fixture for other than its intended purpose, as described in this manual.
5. Do not mount under any source of moisture or condensation, such as humidifiers, cooling coils, etc.
6. Do not remove any labels or devices.
7.  **WARNING** **Do not operate without proper electrical ground.**
8. Do not operate the fixture if there is visible or suspected damage to the fixture or, if applicable, there is damage to power cord and/or plug.
9. Utility power supplied, to the fixture, **MUST** match power requirements listed on the fixture label.
10.  **WARNING** **Always disconnect power to the fixture before performing any service or maintenance.**
11. Read and follow all notices and warnings on the fixture.
12. **SAVE THESE INSTRUCTIONS.**

SAFETY LABELS

Hg - LAMP CONTAINS MERCURY.
Do not put in trash. Dispose in accord
with local, state or federal law.
No. 00-0297



Label: Hg unit (00-0297)

Location of Safety Label
(00-0297)

CAUTION

No warranty or representation is made by the manufacturer with respect to suitability or performance of this equipment or to the results that may be expected from its use.

The user should periodically inspect, clean as necessary and confirm the presence and good legibility of the product safety labels. Contact the factory for replacement labels in the event that any of the labels are missing or illegible.

PRODUCT APPLICATION

CONSTRUCTION

The **Shadow**® Blacklight Fixture consists of:

- **STER-L-RAY**® Blacklight Blue Lamp, which delivers ultraviolet energy at the specific wavelength of 365 nanometers (nm). This wavelength provides photochemical and fluorescent effects.
- **Surelite**™ Electronic Ballast capable of operating at 120 volts 60 hertz.
- Standard, NEMA 5-15, three-prong plug, and operates on 120v AC 60Hz single-phase standard household current.
- All electrical parts and wiring are housed in an enclosure constructed of stainless steel, type 304. Stainless steel construction provides strength, durability and lasting value.
- A polished reflector, whose design and specular aluminum construction maximizes ultraviolet intensity to the exposed area.
- Stainless steel mounting stand or brushed aluminum handle.

PRINCIPLE OF OPERATION

The **Shadow**® line of blacklight fixtures utilize blacklight blue lamps that emit longwave ultraviolet radiation and very little visible light. Blacklight blue lamps create fluorescent or glowing effect.



WARNING Avoid exposure to direct or reflected ultraviolet rays.

UNPACKING

- Remove the **Shadow**® Blacklight Fixture from its shipping carton.
- Atlantic Ultraviolet Corporation® takes all possible precautions when packaging this fixture to prevent damage. Carefully inspect the fixture, power cord and plug if applicable, for damage. Report all damage immediately. Do not assemble or operate if there is any damage, visible or suspected.
- The blacklight lamp is packed separately to ensure maximum protection for the lamp. Keep the lamp aside until ready for installation. When installing lamp, avoid touching glass with bare hands. Oils deposited, from fingers, on the glass could effect ultraviolet transmission.
- Carefully inspect all packing materials to prevent the loss of accessories, mounting hardware, spare parts or instructions.
- Do not discard packing materials until fixture is assembled and check out is complete.

The **Shadow**® Blacklight Fixture includes:

- 1 - Blacklight Fixture with attached 6-ft lead cord
- 1 - **STER-L-RAY**® Blacklight Blue Lamp
- 1 - Installation and Operation Manual

INSTALLATION



IN ORDER TO PERFORM THIS TASK, BE SURE TO WEAR THE FOLLOWING SAFETY EQUIPMENT: SAFETY GOGGLES OR A FACE SHIELD, AS WELL AS GLOVES





▲WARNING

Always disconnect power to the unit before performing any service or maintenance.

▲CAUTION

Blacklight lamp is easily damaged and may cause injury if broken. Exercise care when handling.

1. For all standard **Shadow®** fixtures:
 - Remove lamp from packaging.
 - Will need to be used within 5 feet of an electrical outlet.
2. **Install lamp:** line up the contact pins, of the lamp, with the openings in the lampholders. Make sure that the contact pins are inserted into both lampholders. Once the pins are in, turn the lamp a ¼ turn (90°), the lamp should “snap” into place.
3. Verify that the lamp is properly seated.
4. Moisten a clean, lint-free cloth with denatured alcohol and clean lamp.
5. Apply power to the **Shadow®** fixture. Press in switch, hold 2–3 seconds, and release.
6.   Verify operation by viewing lamp, use of personal protection equipment is required. If the fixture is not operating properly, go to “**Troubleshooting**” section.

PRECAUTIONS

- Procedures **MUST** be adopted to ensure that the **Shadow®** is disconnected from power before performing any service or maintenance. Personnel who utilize the fixture **MUST** be briefed on the precautions to be observed.
- If there are any doubts or concerns about the safety or the effectiveness of the **Shadow®**, please contact our Application Specialists.

OPTIONAL ACCESSORIES

1. **ArmorLite™ Safety Shield:** A Protective coating applied to **STER-L-RAY®** Blacklight Blue Lamps that ensures protection by eliminating the dangers associated with fragments of broken glass and mercury contamination.
2. **Promate™ Safety Goggles:** Safety eyewear should be used as general-purpose safety protection and for additional shielding from ultraviolet rays
3. **Promate™ Face Shield:** Adjustable headgear and lightweight visor provides eye and face protection from ultraviolet rays.

For more information and purchasing contact our offices, weekdays between 8:30 am and 5:00 pm Eastern time, at:
Atlantic Ultraviolet Corporation®, 375 Marcus Boulevard, Hauppauge, New York, 11788

Tel: 631.273.0500 • Fax: 631.273.0771 • Email: Sales@AtlanticUV.com • Website: Ultraviolet.com – BuyUltraviolet.com

MAINTENANCE

- The **Shadow®** is designed to operate with a minimal amount of maintenance.
- A regular cleaning schedule of the blacklight lamp should be established, and carefully maintained, based on visual inspection and experience. The time between cleanings will vary with the conditions to which the **Shadow®** is exposed. It is recommended that the blacklight lamp be cleaned whenever dust or visible deposits are observed on lamp.
- The blacklight lamp used in the **Shadow®** has a manufacturer's rated average effective life of 3,000 hours. Lamps may operate longer than their rated effective life, but the reduction in ultraviolet output will make it impractical to use past the manufacturer's rated life. For maximum efficiency lamp replacement is recommended every 3,000 hours of continuous operation.
- See "Installation" instructions on Page 5 for proper lamp replacement and cleaning procedure.

 **⚠️ WARNING** Always disconnect power to the unit before performing any service or maintenance.

BREAKAGE

⚠️ CAUTION Broken Glass is SHARP.



Wear protective gloves when handling broken ultraviolet lamp(s). In the event of breakage, **DO NOT** use a household vacuum cleaner to pick up glass fragments. Sweep up debris into a plastic bag and dispose of properly.

DISPOSAL OF MERCURY ADDED LAMPS



Blacklight ultraviolet lamps, like standard fluorescent lamps, contain small amounts of mercury. Mercury added lamps should not be placed in the trash. Dispose of properly. For further information regarding the disposal and recycling of lamps containing mercury, along with Federal and State requirements visit www.lamprecycle.org. For more information on blacklight ultraviolet lamps, visit Ultraviolet.com or BuyUltraviolet.com.

TROUBLESHOOTING

 **⚠️ WARNING** Always disconnect power to the unit before performing any service or maintenance.



IN ORDER TO PERFORM THIS TASK, BE SURE TO WEAR THE FOLLOWING SAFETY EQUIPMENT: SAFETY GOGGLES OR A FACE SHIELD, AS WELL AS GLOVES

IMPORTANT: This fixture is to be serviced **ONLY** by qualified, and appropriately licensed, personnel.

Table 1 - Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture not operating	No electrical power	Verify that the fixture is connected to a live power source.
	Power connections, to fixture, loose or disconnected	Verify power connections to fixture are fully engaged.
STER-L-RAY® Blacklight lamp not operating	STER-L-RAY® Blacklight Lamp not properly seated	Confirm connection between lamp and lampholder is tight and lamp is making full contact with lampholder.
	STER-L-RAY® Blacklight Lamp faulty	Swap suspect lamp, with lamp known to be good. If suspect lamp does not operate, replace lamp.
	Surelite™ Ballast not functioning	Locate ballast and replace.

If the above measures fail to correct the problem(s), contact our application specialists. Contact options can be found in the "User Assistance" section of this manual on the back page.

TECHNICAL SPECIFICATIONS

Table 2 - Technical Specifications

Model:		NO4	NO4S	NO6	NO6S
Volts:		120v	120v	120v	120v
Amps:		0.10	0.10	0.12	0.12
Lamp	Lamp:	05-1089		05-1090	
	Power Consumption: ①	4.6w		5.9w	
	Ave. Effective Life: (Hrs)	3,000		3,000	
Length: (in)		6-3/16	6-3/16	7-11/16	7-11/16
Width: (in)		3-21/32	3-21/32	3-21/32	3-21/32
Height: (in)		3-11/16	8-1/8	3-11/16	8-1/8

① Wattage is lamp watts only and does not include ballast loss.

All specifications, dimensional data, etc. are approximate and subject to change without notice.

Note: **Shadow**® NO4, NO4S, NO6, and NO6S are available in other voltages. Contact factory with your requirements.

REPLACEMENT PARTS

Table 3 - Replacement Parts

Model:	NO4	NO4S	NO6	NO6S
STER-L-RAY ® Blacklight Blue Lamp	05-1089	05-1089	05-1090	05-1090
Surelite ™ Ballast – 120v/60Hz	10-1055	10-1055	10-1055	10-1055
Promate ™ Starter Switch	35-1335	35-1335	35-1335	35-1335
Steadfast ™ Lampholder	05-1322	05-1322	05-1322	05-1322
Promate ™ Lead Cord 120v	35-1100-R	35-1100-R	35-1100-R	35-1100-R

Other replacement parts are available. Consult the factory with specific requirements.

USER ASSISTANCE

Atlantic Ultraviolet Corporation® makes every effort to ensure that the **Shadow®** Blacklight Fixture is a product of superior quality and workmanship. This manual describes the installation, operation and maintenance of the **Shadow®** Blacklight Fixture.

Please read and become familiar with the contents of this manual before installing or using this unit. If after reading the manual you still have questions, or concerns, regarding the installation or use of this unit, contact our offices, weekdays between 8:30 am and 5:00 pm Eastern Time, at:

Atlantic Ultraviolet Corporation®
375 Marcus Boulevard
Hauppauge, New York, 11788
Tel: 631.273.0500
Fax: 631.273.0771
Email: Sales@AtlanticUV.com
Website: Ultraviolet.com
BuyUltraviolet.com

PATENT NOTICE

No attempt has been made to determine the patent status of applications illustrated or described in this publication. Inclusion in this publication of any design or method of use, which may be patented, is not to be construed as promoting or sanctioning unauthorized use.

WARRANTY & PRODUCT REGISTRATION

We warrant this product to the original owner to be free from defects in material and workmanship when installed in accordance with Atlantic Ultraviolet Corporation® specifications for a period of time as follows:

UV Water Purifier Chambers – Type 316 stainless steel chambers will have a Twelve (12) year Limited Warranty on the stainless steel chamber, from the date of original purchase while the Type 304 stainless steel chambers will have a Six (6) year Limited Warranty on the stainless steel chamber.

UV Air Disinfection Housing – Three (3) year Limited Warranty on the metal housing, from the date of original purchase.

Ballasts – Three (3) year Limited Warranty, from the date of original purchase.

UV Lamps, Monitoring Devices, Optional Accessories, and Other Parts – One (1) year Limited Warranty from the date of original purchase.

Within the warranty period we shall repair or replace such products, which are returned to us with shipping charges prepaid and which are determined by us to be defective. This warranty will not apply to any product, which has been subjected to misuse, negligence or accident; or misapplied; or modified; or repaired by unauthorized person; or improperly installed. Warranty will be null and void if any of the product's original labels are removed. This Limited warranty excludes the cost of labor.

The Buyer shall inspect the product promptly after receipt and shall notify us at our main office in writing of claims, including claims of breach of warranty, within thirty (30) days after the Buyer discovers or should have discovered the facts upon which the claim is based. Failure of the Buyer to give written notice of a claim within the time period shall be deemed to be a waiver of such claim.

The provisions of the above warranty are our sole obligation and exclude all other remedies or warranties, expressed or implied, including warranties of merchantability and fitness for a particular purpose, whether or not purposes or specifications are described herein. We further disclaim any responsibility whatsoever to the customer, or to any person for injury to person, damage to, or loss of property or value caused by any product which has been subjected to misuse, negligence, accident; or modified or repaired by unauthorized persons; or improperly installed.

Under no circumstances shall the Company be liable for any incidental, consequential or special damages; losses or expenses arising from the contract for this product, or in connection with the use of, or inability to use, our product for any purpose whatsoever.

Be sure to register your product and validate purchase within 30 days — registration is simple and will take less than 2 minutes to do.

NOTE – failure to register your purchase may jeopardize warranty.

Go to Ultraviolet.com and scroll down to the bottom of the page, under “Trust” click the “Warranty Registration Form”, complete and click “Submit”. Or click on “Warranty Registration PDF” to download the warranty registration card as a PDF, complete and mail to us at 375 Marcus Boulevard, Hauppauge, NY 11788, or simply fax to 631-273-0771. If you prefer to register by phone, please call 631-273-0500 and our customer service staff will be glad to assist you.

For your convenience, record the following information below. The model and serial number can be found on a label located on the **Shadow®** Blacklight Fixture. Keep this manual, along with proof of purchase, handy when contacting our offices.

Purchased From:	Date:
Model:	Serial No.: