Sanidyne

ULTRAVIOLET PORTABLE AREA SANITIZERS

PRIME REMOTE PLUS PREMIUM







User's Guide





This User's Guide MUST be utilized in conjunction with the **Sanidyne**® Owner's Manual for Installation, Operation & Maintenance for your specific model.







ULTRAVIOLET PORTABLE AREA SANITIZERS

RIME 🗱 | PRIME 🐉 REMOTE | PLUS 🕂 | PREMIUM 💢



98-1709



98-1692



98-1724

Sanidyne

Amalgam Remote

Installation.

Operation &

Maintenance

ATLANTIC ሀ ULTRAVIOLET





<u>READ</u> Owner's Manual for Installation, Operation & Maintenance. Read and Follow <u>ALL</u> Safety Instructions.

Additional Copies of the Manual are Available on <u>Ultraviolet.com</u> & <u>BuyUltraviolet.com</u>.

Contact a UV Application Specialist with Any Questions.









PREMIUM 480 UV Watts



PLUS 312 UV Watts



143 UV Watts



PRIME REMOTE



ULTRAVIOLET PORTABLE AREA SANITIZERS



PRIME 143 UV Watts



PRIME Pictured with & without **Protective Cover**



Sanidyne® is for use ONLY in UNOCCUPIED Areas.















Operators <u>MUST</u> Post the Provided Safety Signs and Labels When **Sanidyne**[®] is in use.



ULTRAVIOLET PORTABLE AREA SANITIZERS

PRIME REMOTE PLUS PREMIUM









Contact a UV Application Specialist for Additional Signs or Labels






ULTRAVIOLET PORTABLE AREA SANITIZERS

Read and Understand Safety

Warnings and Instructions

See Page 3 of your Owner's Manual

Contact a UV Application Specialist With Any Questions

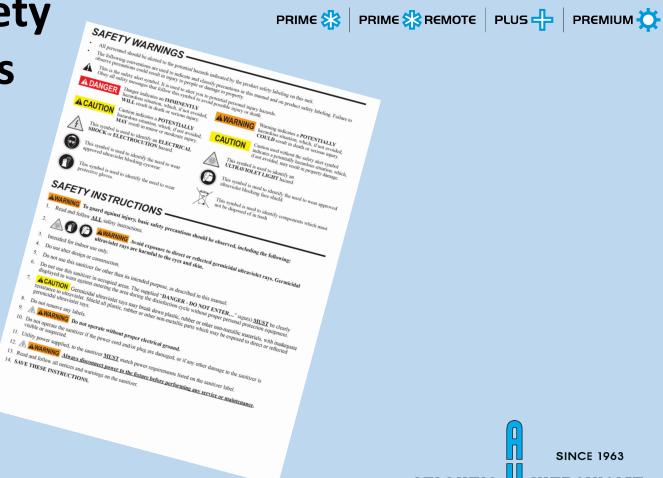



Sanidyne


Inspect all <u>Safety Warning Labels</u>

ULTRAVIOLET PORTABLE AREA SANITIZERS



See Page 4 (Page 4-5 for Prime Model) of your Owner's Manual for Labels and Label Locations.

It is the user's responsibility to inspect and confirm the presence and good legibility of the product safety labels. Contact a UV Application Specialist for replacement labels if needed.

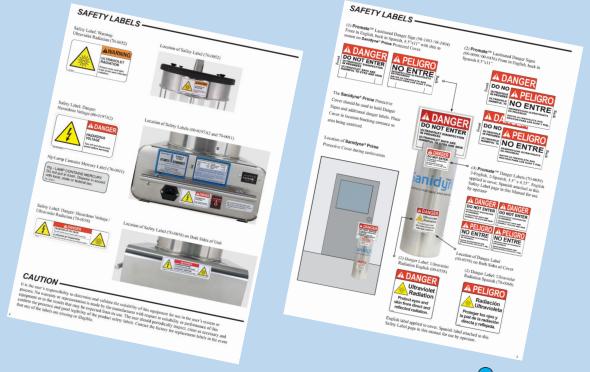



Safety procedures <u>MUST</u> be implemented to <u>prevent ultraviolet</u> exposure of occupants to direct or reflected ultraviolet rays.

Exposure to germicidal ultraviolet rays will result in the irritation of the eyes and reddening of the skin.

See Page 5 (Page 6 for the Prime Model) for Construction, Principal of Operation, and Limitations.










Personal Protection Equipment is **REQUIRED** when entering the irradiated space with the germicidal lamps operating.

Personal protection equipment includes <u>skin and eye</u> <u>protection</u> such as gloves, long sleeves with NO GAPS between <u>cuff</u> and <u>gloves</u>, and an ultraviolet blocking face shield (included with the purchase of the **Sanidyne**®).





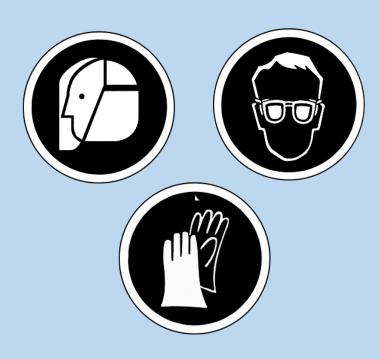




<u>UNPACKING</u> – In Order to Perform this Task, be Sure to Wear the Following Safety Equipment: Safety Glasses or a Face Shield, as well as Gloves.

See Page 6 (Page 7 for the Prime Manual) of your Owner's Manual





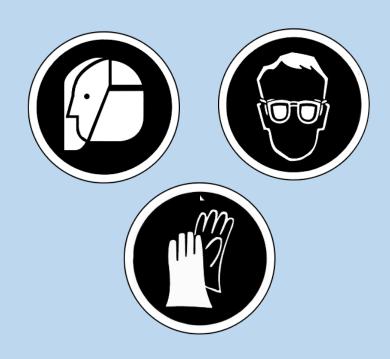



UNIT PLACEMENT

The **Sanidyne**® is intended for use in UNOCCUPIED AREAS ONLY. Under no circumstances, should this sanitizer be permitted to operate with humans, plants, or animals present in the Operation Area.

See Page 10 (Page 8 for the Prime Model) of your Owner's Manual





UNIT PLACEMENT

The **Sanidyne**® is intended for <u>INDOOR</u> use only. The **Sanidyne**® should be protected from liquid intrusion such as dripping water, condensation, or mist, and used only in a clean, dry location with temperature ranges between 40°F to 95°F.



PRIME STREMOTE | PLUS - PREMIUM -



See Page 10 (Page 8 for the Prime Model) of your Owner's Manual



LAMP INSTALLATION – In Order to Perform this Task, be Sure to Wear the Following Safety Equipment: Safety Glasses or a Face Shield, as well as Gloves.







See Page 9 (Page 8 for the Prime Model) of your Owner's Manual











LAMP INSTALLATION

[!CAUTION] Germicidal lamps are easily damaged. Exercise care when handling lamps.

[!WARNING] Always disconnect power to the Sanidyne® before performing any service or maintenance


See Page 9 (Page 8 for the Prime Model) of your Owner's Manual



Sanidyne

ULTRAVIOLET PORTABLE AREA SANITIZERS



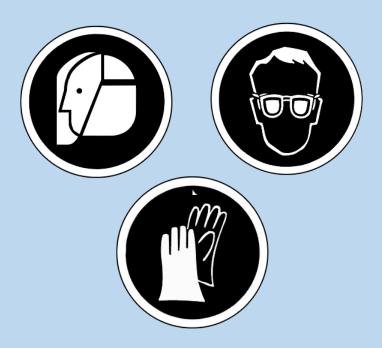



Sales@AtlanticUV.com - 631-273-0500 - Ultraviolet.com - BuyUltraviolet.com

UNIT PLACEMENT

Electrical power supplied to the Sanidyne® must match power requirements listed on the Sanidyne®.

See Page 10 (Page 8 for the Prime Model) of your Owner's Manual














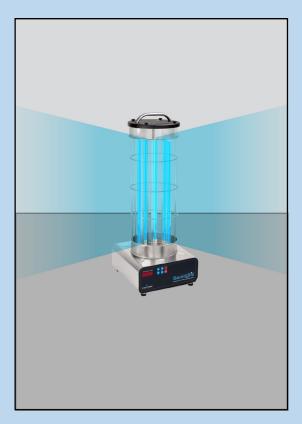



UNIT PLACEMENT

For <u>maximum efficiency</u>, the **Sanidyne**® should be located as centrally as possible, away from the corners of the treatment area. It is <u>most effective</u> when located in the center of the room and the <u>ultraviolet rays are unobstructed</u>.

See Page 10 (Page 8 for the Prime Model) of your Owner's Manual



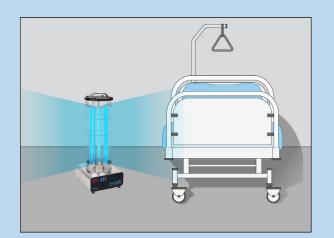

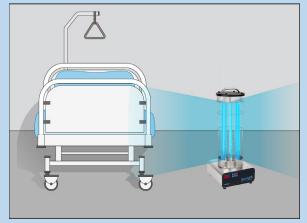



UNIT PLACEMENT

For areas where ultraviolet rays are obstructed, multiple treatments in other locations in the area are required.

See Page 10 (Page 8 for the Prime Model) of your Owner's Manual





UNIT PLACEMENT

Access to the room MUST be avoided while the **Sanidyne**® is operating.

See Page 10 (Page 8 for the Prime Model) of your Owner's Manual























UNIT OPERATION

All Models have a Keypad Controller, 24-Hour Interval Timer, a 1-Minute and 30 Second Audible Exit Warning.

The Prime Remote, Plus and Premium have Occupancy Sensors and a Remote Control.

See Page 11-12 (Page 9-10 for the Prime Model) of your Owner's Manual





















TREATMENT TIME

Determine the treatment time by size of the room, and the distance from the unit.

For rooms where ultraviolet rays are obstructed, it might require multiple treatments.

See Page 13 (Page 10 for the Prime Model) of your Owner's Manual



MAINTENANCE


Always disconnect power to **Sanidyne**[®] before performing any service or maintenance.

Regular Visual Inspection of lamps and **Sanidyne**[®] should be performed, average effective life of lamps are 13,000 hours. All lamps should be replaced at the same time.

See Page 14 (Page 11-12 for the Prime Model) of your Owner's Manual





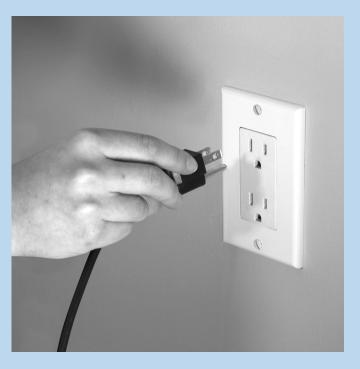



MAINTENANCE

[!CAUTION] Breakage - Broken Quartz is SHARP. Wear Protective Gloves. Sweep up debris into a plastic bag and dispose of in accordance with local and/ or state regulations.

For Disposal of Sanidyne® Lamps see Owner's Manual

See Page 14 (Page 12 for the Prime Model) of your Owner's Manual









MAINTENANCE

The Prime and Prime Remote fuse is contained in a small plastic tray at bottom of the power connector. Open the tray (Spare Fuse is Clipped in Front of Active Fuse).

See Page 13 for Prime, Page 15 for the Prime Remote of your Owner's Manual











TROUBLESHOOTING

Always disconnect power to the **Sanidyne**[®] before performing any service or maintenance.

Sanidyne® Sanitizers are to be serviced **ONLY** by qualified and factory authorized personnel.

See Page 15 (Page 12 for the Prime Remote Model) of your Owner's Manual







TECHNICAL SPECIFICATIONS

Model Specification, Voltage, Amperage, Hertz, Maximum Treatment Time, Weight, Dimensions and Lamp Data can all be found in your Owner's Manual.

See Page 13 for the Prime, Page 16 for Prime Remote,
Page 15 for the Plus and Premium of your Owner's Manual





OPTIONAL ACCESSORIES & REPLACEMENT PARTS

See Page 14 for the Prime, Page 17 for Prime Remote,
Page 16 for the Plus and Premium of your Owner's Manual

Contact a UV Application Specialist with Any Questions.



Sanidyne

ULTRAVIOLET PORTABLE AREA SANITIZERS

PRIME PRIME REMOTE | PLUS | PREMIUM



631-273-0500 Ultraviolet.com BuyUltraviolet.com

The information and recommendations contained in this publication are based upon data collected by Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.



